## Skip Blank Page for Scanning 3501i/4501i/5501i series

- ➢ Go to Send screen.
- Select your destination.
- Press Advanced Setup Tab

tion		Detail		$\sim$	Book
				1/1	E-mail Addr Entry
	1	1		$\leq$	Folder Path Entry
t Chain Detail/Edit Delete Recall				ecall	FAX No.
0002	0003	0004	0005	No.	Entry
0007	0008	0009	0010	1/100	wSD Scan
				$\sim$	0
uick Setup	Org./Sending Data Format	Image Qu	Advanced Setup		Program

Press Down Arrow





Ready to Enter Destinatio	o send.	Oestination
Sending Image	Send and Store Store St	x Text Stamp
Display image before sending.	File Size Confirmation	Skip Blank Page
Original : Zoom : 100% Send :		
Preview	tun Ora (Sandina Calar)	2/2 V

Press Skip Blank Page button.

Ready 1 Enter Destinat	to send.	Destination 0
Skip Blank Page		
Display image before sending.	Off Blank Page Skip and removes bl	) automatically detects ank pages.
Original :		
Zoom : 100%		
Preview		
Add Shortcut	Car	ncel 🖌 OK

Press On Button.



> Set Detection Level then Ok. Middle is default.



> Place documents in ADF and Press Start to begin scanning.



